



CONFERENCE ROOM MICROPHONE OPERATION

Locate the Bose keypad on the wall to the left of TV.

Under SELECT, use the + button or – button to scroll until the LCD screen shows “Microphone” (The image shows “Rehearsal”)



Volume can be controlled using the + button to increase sound or – to decrease sound

On the wireless microphone:

1. Locate the power button and turn on.
2. The LCD screen will indicate that it is on and will show the battery level on the microphone.
3. Test volume and adjust with the Bose keypad volume as necessary.